

ELVITA

User manual
Kitchen Hood

Bruksanvisning
Köksfläkt

CSF3600X



Thank you

for your trust and the purchase of our product. This user manual is supplied to help you use this product. The instructions should allow you to learn about your new product as quickly as possible.

Make sure you have received an undamaged product. If you do find transport damage, please contact the seller from which you purchased the product, or the regional warehouse from which it was supplied.

Tack


för ditt förtroende och för köpet av vår produkt. Denna bruksanvisning medföljer för att hjälpa dig att använda produkten. Med hjälp av instruktionerna kan du lära dig om din nya produkt så snabbt som möjligt.

Kontrollera att produkten du har tagit emot är oskadad. Om du upptäcker en transportskada, var vänlig kontakta återförsäljaren som du köpte produkten av, eller den lokala butiken som levererade den.

ELVITA

Publication date: 2022-03-31

This document and its content, including written material and images, are the property of Elon Group AB. You may not copy, reproduce, modify, republish or distribute this document or any of its content without express written permission from Elon Group AB. © 2022, Elon Group AB. All rights reserved.

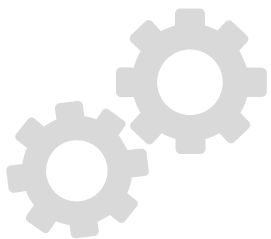

WARRANTY

Guarantee of quality for the consumer (does not include wear parts).

GARANTI

Kvalitetsgaranti gäller för konsument (omfattar ej förbrukningsdelar).

CONTENTS/INNEHÅLL

ENGLISH	5
SVENSKA	29

Contents

INPUT.....	6
TECHNICAL DRAWING.....	7
WARNING AND SAFETY PRECAUTIONS	8
LETHAL RISK, DANGER OF POISONING.....	10
USAGE WITH AND WITHOUT CARBON FILTER	15
CARBON FILTER REPLACEMENT.....	16
CLEANING AND PREVENTIVE MAINTENANCE.....	17
APPLIANCE POSITION	18
CONTENT OF PACKAGE.....	20
OVERVIEW OF HOOD.....	20
ASSEMBLY OF PRODUCT.....	21
USE OF PRODUCT	24
REPLACING THE LAMPS.....	25
AUTHORIZED SERVICE.....	26
TROUBLESHOOTING	27
TECHNICAL TABLE	28

INPUT

This guideline and the safety data includes all necessary information for a safe mounting as well as a safe use without defects.

- Please read all of this guideline and safety data before using the device.
- Keep the guideline in an appropriate place.
- If you pass the device onto others, make sure you also give this guideline and safety data.
- Disregarding this guideline may result in severe injuries and defects in the device.
- Please keep in mind that we won't be responsible for the defects arising from not taking this guideline into account.

The figures in this guideline aim to visually describe the actions. In these figures only one model of the device is illustrated. However, all instructions or figures also represent other models.



WARNING AND SAFETY PRECAUTIONS

- This appliance can be used by children of 8 years and older, people with physical, sensory or mental capability deficiency or people with lack of experience or knowledge; as long as they are provided supervision or instructions for the safe use of the appliance and they comprehend the dangers.
- Children should not tamper with the appliance. Cleaning and user maintenance operations must not be performed by children unless supervised.
- This product is designed for home use.
- Usage voltage of your product is 220-240 Volt~50-60 Hz.
- Power cord of your product is fitted with a grounded plug. This cord must be plugged into a grounded outlet.
- The whole electrical wiring must be installed by a qualified electrician.
- Installation by unauthorized persons could lead to poor operation performance, damage to the product, and accidents.
- Feeder cable of the appliance mustn't be exposed to jamming or crashing during assembly. Feeder cable mustn't be placed near the cooker. In such cases, it might melt down and lead to fire.
- Do not plug in the appliance before the installation.
- Make sure that the installation place allows the user to easily unplug the power cable in case of any danger.
- Do not touch your product's lamps when they work for a long time. The lamps may burn your hand as they will be hot.
- Kitchen hoods are manufactured for household use in normal home cooking. There is a risk of malfunction in other types of use, and the product guarantee will be void.
- Comply with the rules and instructions regarding discharge of outgoing air, stipulated by the relevant authorities. (This warning does not apply to uses without flue.)
- Flammable foods must not be cooked under the appliance.
- Start your product after you place pot, pan etc. on the stoves. Otherwise, high temperature may cause same parts of your products to deform.
- Turn off the cooker's burner before taking the saucepan, pan, etc. off the cooker.
- Do not leave boiling oil on the stove. Pots that contain boiling oil may catch fire by itself.
- Since oils could catch fire when you cook fried foods in particular, be careful about your curtains and tablecloths.
- Ensure timely replacement of the filters. Filters not replaced in a timely manner pose risk of fire due to accumulated grease deposits on them.
- Do not use non-fire-resistant filtering materials instead of the filter.

- Do not operate your product without filter, and do not remove the filters when the product is in operation.
- In case of any fire, de-energize the hood and any other cooking devices. (Plug off the appliance or turn off the main switch.)
- If your product's periodic cleaning is not made in a timely manner, it could pose risk of fire.
- De-energize the appliance before any maintenance operations. (Plug off the appliance or turn off the main switch.)
- When electric cooker hood and devices fed with energies other than electricity operate simultaneously, the negative pressure in the room must not exceed 4 Pa (4 X 10 bar).
- Gas or fuel oil burning appliances, such as room heaters, which share the same environment with your product, must be fully insulated from the exhaust of this product or they must be hermetical.
- When you make a flue connection for your product, use pipes with a diameter of 150mm or 120 mm. The length of the duct connection as well as the number of elbows must be as minimum as possible.
- Children must not play with the appliance.
- For your safety, use "MAX 6 A" fuse in the hood system.
- Since the packing materials could be dangerous, keep them away from children.
- If the feeder cable is damaged, it must be replaced by its manufacturer or its authorized technical service or any other personnel qualified at the same level, in order to avoid any dangerous situation.
- In case of any deflagration, de-energize the cooker hood and cooking appliances, and cover the flame. Never use water to extinguish the fire.
- When cooking appliances are in operation, their accessible parts could be hot.
- This appliance is not intended to be used by people with physical, sensory and mental disabilities (including children) or those who do not have adequate experience and knowledge regarding its use, unless they are under the supervision of a person responsible for the safety of the appliance.
- After the installation of the hood, the minimum distance must be 65 cm between the product and any electric cooker; and 75 cm between it and any gas ranges or cookers burning other fuels.
- Output of the hood must not be connected to air ducts, where smoke from other sources could exist.
- You must be careful when using the appliance spontaneously with other appliances (e.g. gas, diesel fuels, coal, wood, etc. burning heaters, shower heaters), which use the same air in the same environment. Attention must be paid when using them simultaneously. It is because the hood could adversely affect the combustion, by discharging the ambient air.
- This warning does not apply to uses without flue.
- When electric cooker hood is used simultaneously with devices that use gas or other fuels, there must be sufficient ventilation in the room (might not apply to devices that discharges the air back into the room).

LETHAL RISK, DANGER OF POISONING



DANGER! **Warning - Choking Hazard!**

The packaging materials are dangerous for children. Never allow children to play with packaging materials.



DANGER! **Warning - Death Hazard**

There are life-threatening danger and poisoning danger due to reabsorbed combustion gases. During the air discharge outlet use, unless sufficient air supply is provided, do not use the appliance simultaneously with devices that discharge toxic gases through flue such as ventilated, gas, oil, wood or coal burning heaters, shower heaters, water heaters, etc. Fig. 2

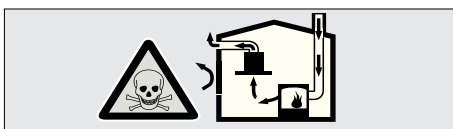


Fig. 2: Poisoning Danger

Ventilated goods (e.g. gas, oil, wood or coal burning heaters, shower heaters, water heaters) take combustion air from the installation location, and discharge the waste gas through a waste gas system (e.g. flue). When the cooker hood is active, it absorbs air from the kitchen and neighbouring rooms. If adequate air entry is not provided, vacuum emerges. In such a case, the toxic gases are absorbed from the flue and waste gas channel, and are taken into the door again. Fig. 2

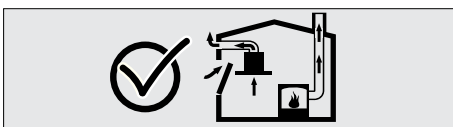


Fig. 3

- Therefore, adequate fresh air ingress must always be ensured. Fig. 3

**WARNING!**
Fire danger!

- The oil residue in the grease filter may catch fire. Clean the grease filter at least once every 3 months. Never operate the device without the grease filter.
- The oil residue in the grease filter may catch fire. Never work with open flame (ex. flambe) near the device. The apparatus is allowed to be installed near a solid fuel (e.g. wood or coal) heater only if it has a non-removable cover. No sparks should be scattered.
- Hot oils and fats catch fire easily. Hot oils and fats should never be left unattended. Never try to put out fire with water. Turn off the cooker. Kill the flames carefully using a cover, fire blanket or a similar material.
- Gas operated cookers that do not have a cooking pot on create high heat during operation. A ventilation device placed over the cookers can be damaged or burned for this reason. Operate gas cookers only when there is a cooking pot on them.
- Operating multiple gas cookers simultaneously creates high heat. A ventilation device placed over the cookers can be damaged or burned for this reason. Never operate two gas cookers longer than 15 minutes on high flame setting. A large burner over 5kW (Wok) has the power of two gas burners.

**WARNING!**
Electrocution hazard!

- A malfunctioning device may cause electric shock. Never turn on a malfunctioning device. Pull the power plug and switch off the circuit breaker. Call customer service.
- Unsuitable repairs pose hazards. Repairs and replacement of damaged power cords must be performed only by a customer services technician trained by us. If the device is malfunctioning pull the power plug and switch off the circuit breaker. Call customer service.
- Water leaking into the device may cause electric shock. High pressure or steam cleaners must not be used.

**DANGER!**
Danger of physical injury!

- During the installation, there is a danger of physical injury due to the sharp edges. Use protective gloves throughout the installation process of the appliance.
- Due to risk of dropping the appliance, assembly of all safety bolts and covers must be performed as specified in the user manual.
- Objects placed on the appliance may fall over. Do not place any objects on the device.
- LED lights are very bright and may damage eyes (Risk group 1). You must not look directly at running LED lights for longer than 100 seconds.

**WARNING!**
Risk of burn, risk of electric shock!

- Allow the appliance to cool before cleaning or maintenance process. Switch off the fuse or pull out the mains plug from the socket.
- There is risk of damage due to ingress of moisture in the electronics. Do not clean the control components with a wet cloth.
- The surface could be damaged due to a wrong cleaning process. Clean stainless steel surfaces only in their brushing direction. Do not use a stainless steel cleaner for the control elements.
- The surface could be damaged due to aggressive and abrasive cleaning agents. Never use aggressive and abrasive cleaning agents.

**WARNING!**
Dangers of fire and physical injury!

In case of repairing that is not performed according to the rules or as required, turn off the fuse or unplug the feeder cable of your appliance. Repairing must be performed only by the authorized technical service or authorized experts.

**NOTICE!**

If the appliance is faulty or damaged, turn off the fuse or unplug the feeder cable of your appliance and call the authorized service.

**NOTICE!**

If the feeder cable is damaged, it must be replaced by its manufacturer or its authorized technical service or any other personnel qualified at the same level, in order to avoid any dangerous situation.

**NOTICE!**

When the bulbs of the device malfunction, switch off the circuit breaker and unplug the device's power plug from the socket. Replace the defective bulbs immediately (leave bulbs to cool down first), in order to protect the remaining bulbs against overloading.

**CAUTION!**

Accessible components might be heated when used with cooking devices.

**DANGER!**

Air outlet pipe of this appliance mustn't be connected in the flue used to discharge the fume generated by devices that use gas or other fuels.

Damage reasons



CAUTION!

Damage hazard due to corrosion. Always run the appliance to prevent condensate formation while cooking. Condensates may cause corrosion damage. Replace the malfunctioning lamp right away to prevent overloading of other lamps. Moisture intrusion in electronic parts poses a risk of damage. Never clean the control elements with a wet cloth. The surface could be damaged due to a wrong cleaning process. Clean stainless steel surfaces only in their brushing direction. Do not use a stainless steel cleaner for the control elements. The surface could be damaged due to aggressive and abrasive cleaning agents. Never use aggressive and abrasive cleaning agents. There is a risk of damage due to condensate liquid backflow. Install the air exit canal with a small downward inclination (1° inclination) from the appliance.

USAGE WITH AND WITHOUT CARBON FILTER



You can use this appliance in exhaust air mode and ventilated air mode.

Exhaust air mode

The absorbed air is cleaned by the grease filters, and is discharged through a piping system. Fig. 4

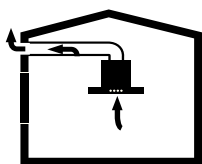


Fig. 4: Air Outlet without Carbon Filter



NOTICE!

Exhaust air must not be transferred to an active smoke or waste gas flue; or a flue used for ventilation of the places, where heat sources are installed.

- If you want to transfer exhaust air to an inactive smoke or waste gas flue, you need to obtain permission from an authorized chimney sweep.
- If exhaust air is discharged through the external wall, a telescopic wall safe must be used.

Ventilated air mode



Absorbed air is cleaned by the grease filters and an active carbon filter, and then it is transferred back to the kitchen. Fig. 5

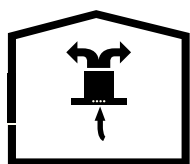


Fig. 5: Air Circulation with Carbon Filter



You need to install an active carbon filter, in order to catch the substances, which cause stink in the circulating air. Consult your authorized dealer to know the different opportunities available for enabling the appliance to function in circulating air mode. You can buy the accessories required for this process from the relevant outlets, authorized technical service or online sales center.

CARBON FILTER REPLACEMENT

Under circumstances without a flue, an active carbon filter should be used to resend the inside air by re-filtering. An active carbon filter should be obtained from the service or your dealer. Disconnect the device prior to replacing the carbon filter. Since the carbon filter is used in kitchens without a flue outlet, it should be replaced with a new one every 3 to 5 months subject to usage. The carbon filter should never be washed. In any case the oil filters should be attached to the product regardless of using a carbon filter or not. Do not use the product without an oil filter.

CARBON FILTER

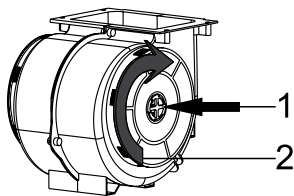


Fig. 6: CARBON FILTER

1. Place the carbon filter to its housing Fig. 6.
2. Please mount the carbon filter by turning it on the its right side and be sure that it is fixed.Fig. 6.



If carbon filter does not fit in completely, it might drop and damage your product.



DANGER!

Never wash the carbon filters.
Keep carbon filters away from children.

CLEANING AND PREVENTIVE MAINTENANCE

**CAUTION!**

Cleaning and user maintenance of the appliance shall not be performed by unattended children.

- The surface could be damaged due to aggressive and abrasive cleaning agents. Never use aggressive and abrasive cleaning agents. Procure your cleaning and protective substances that are appropriate for your appliance from the authorized technical service. Surface of appliance and control units are sensitive to scratching.
- Clean the surfaces with a soft and damp cloth, dishwashing liquid or mild glass cleaning agent. Soften the dry, sticky dirt with a damp cloth. Do not scrape!
- It is not appropriate to use dry cloths, sponges that may scratch, materials that require rubbing, and other aggressive cleaning agents containing sand, soda, acid or chlorine.
- Clean the stainless steel surfaces in their brushing direction only.
- Do not use stainless steel cleaning agents and wet clothes for control units. Cleaning of metal grease filters Used metal grease filters retain the greasy particles in the moisture and vapour generated in the kitchen. Clean the metal grease filters about every three months, under normal use conditions (1 to 2 hours a day).
- Do not use excessively effective, acidic or alkaline cleaning agents.
- For cleaning the metal grease filters, clean the holder parts of the metal grease filters in the appliance, with a damp cloth as well.
- You can clean the metal grease filters in the dishwasher or by hand.
- Do not apply spray cleaning supplies directly to the product.
- Do not keep flammable and/or heavy decorative items on the product.

Washing in Dishwasher

In case of washing in dishwasher, a slight change might occur in colour. This has no effect on the function of the metal grease filter.

- Do not clean too dirty metal grease filters together with utensils in the dishwasher.
- Place the metal grease filters loosely and freely in the dishwasher. Metal grease filters must be placed in the dishwasher without jamming.


Hand Wash



For stubborn dirt, you can use a special grease solvent. You can buy such an agent from the authorized sales centre.

- Soften the metal grease filters in a hot water with dish-washing liquid.
- Use a brush for cleaning and wait for the liquid in metal grease filters to flow off completely.
- Rinse the filters thoroughly after cleaning.

APPLIANCE POSITION

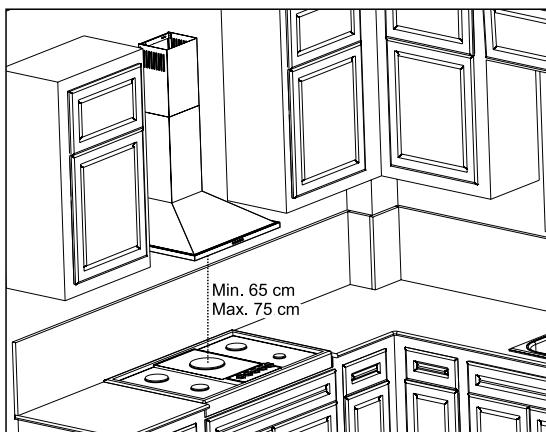

When the hood is installed, the product must have at least 65cm clearance with the electricity cookers and 75cm with cookers operating on gas or other fuels (Fig. 7).

Fig. 7:

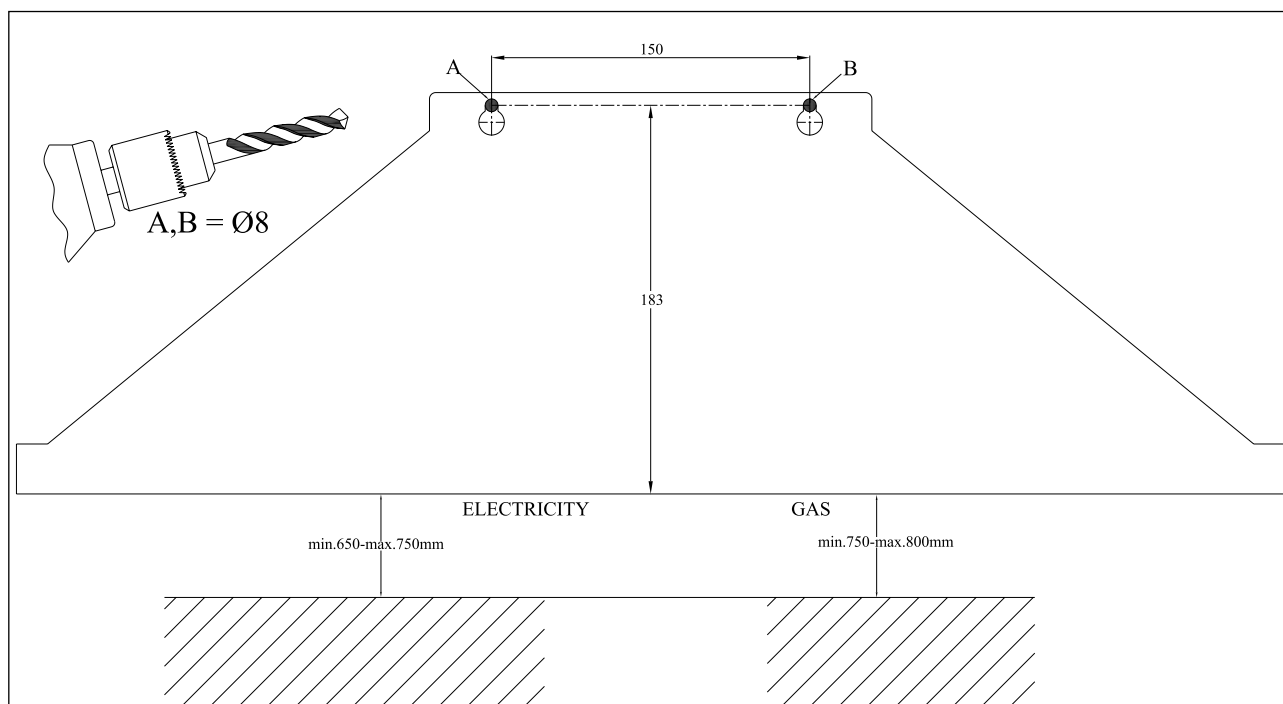


Fig. 8

Installation and Unpacking of the Appliance

- Check that your appliance is not deformed.
- Report any transport issues immediately to transport operator.
- Any faults encountered shall be reported to the dealer, too.
- Do not allow children to play with the packaging materials!

Recommendations for Energy Saving

- Replace the carbon filters on a regular basis.
- Regularly clean your aluminium filters. Since dirty filters would block the air passage, you might have to use the appliance at a higher speed.
- Use your product according to its normal speeds.
- Use at higher speed would cause an increase in the energy consumption.

CONTENT OF PACKAGE


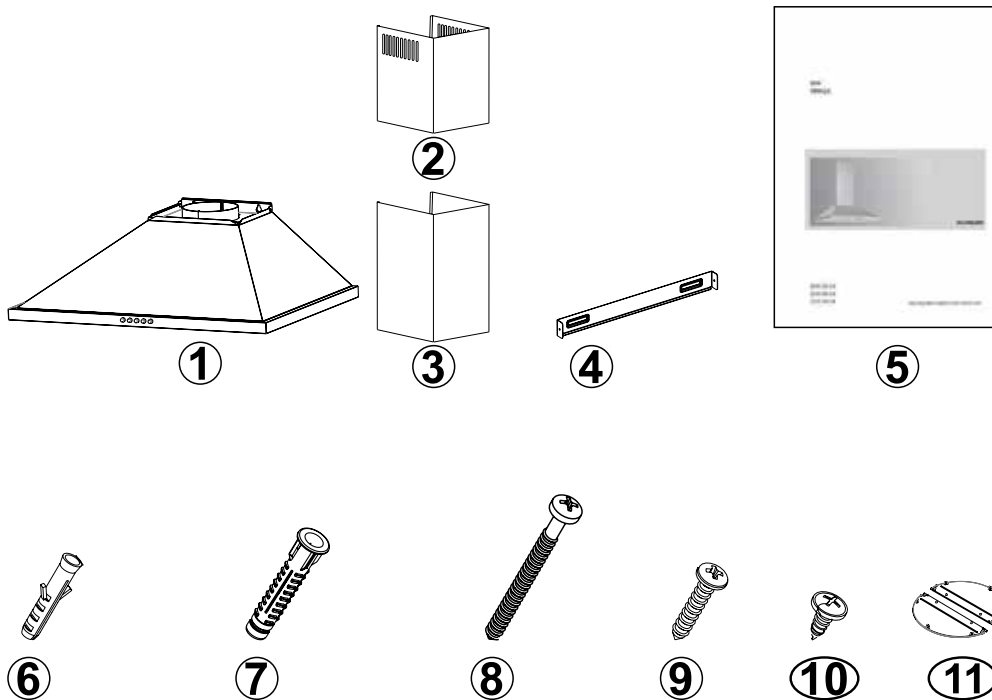


Fig. 9

- 1- Product
- 2- Internal Flue
- 3- External Flue
- 4- Flue Connection Metallic Sheet
- 5- Operation Manual
- 6- Ø6mm Plastic Pin

- 7- Ø10mm Plastic Pin
- 8- 5.5x60 Wall Mount Screw
- 9- 3.9x22 Flue Connection Sheet Screw
- 10- 3.5x9.5 Flue Connection Screw
- 11- Flue Flap

OVERVIEW OF HOOD

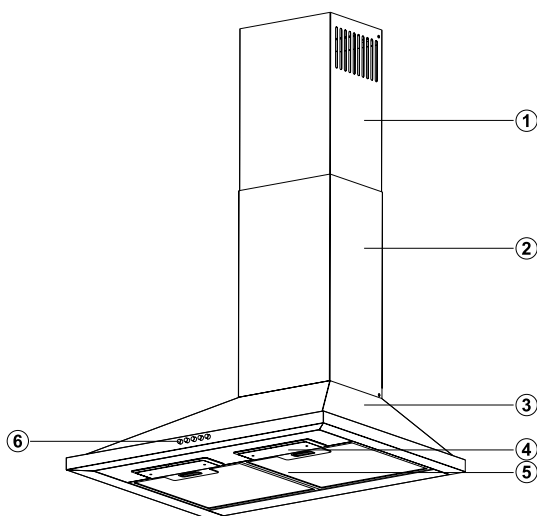


- 1- Internal Flue
- 2- External Flue
- 3- Body
- 4- Cooker Lighting
- 5- Aluminum filter
- 6- Control Panel

Fig. 10: Overview of hood

ASSEMBLY OF PRODUCT

Installation Diagram and Components

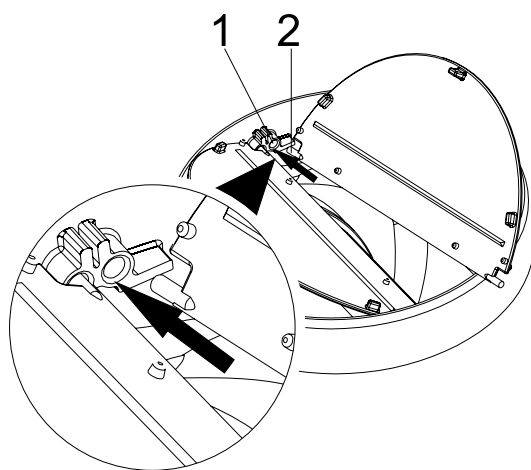

1- Flap Pin Socket

2- Flap Pin

The device mounting accessories include two hood flaps. Attach these flaps to the motor exhaust as seen below.

- Insert the plastic pin (area no.2) on the pin socket on the motor exhaust (area no.1). Fig. 11. Then bend the flap lightly to insert the other pin on the flap and insert the other pin to its socket (Fig. 11).

Fig. 11:

Installation Diagram and Components

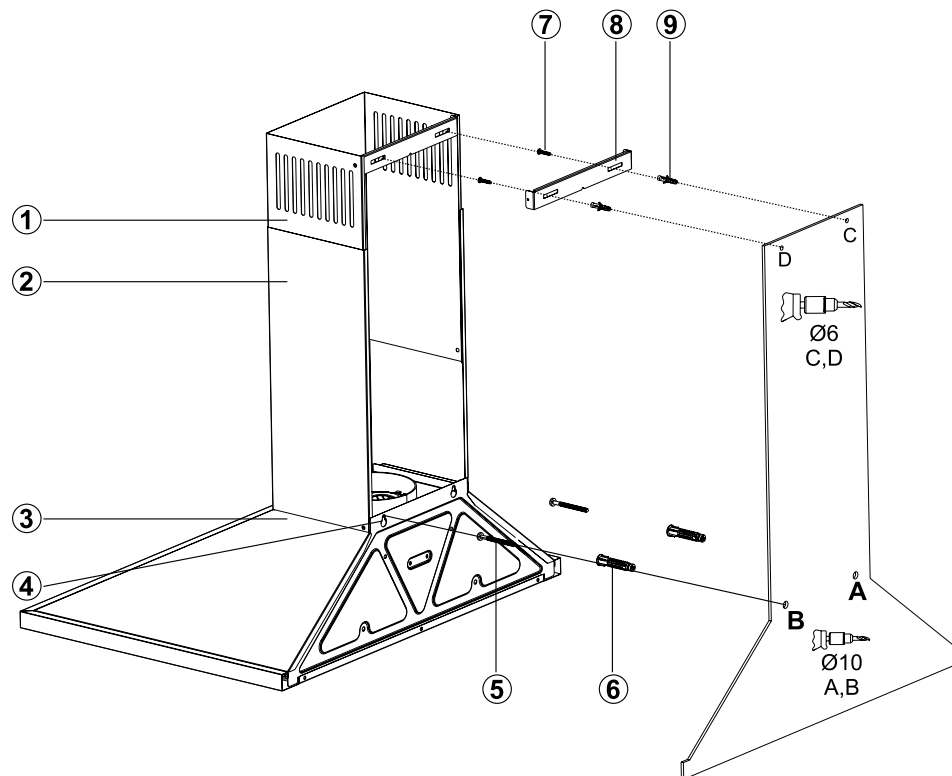


Fig. 12

- | | |
|------------------------------|-----------------------------------|
| 1- Internal Flue | 6- 2x Ø10mm Plastic Pin |
| 2- External Flue | 7- 2x 3.9x22 Screw |
| 3- Body | 8- Flue Connection Metallic Sheet |
| 4- Product Rack Sheet | 9- 2x Ø6mm Plastic Pin |
| 5- 2x 5.5x60 Wall Rack Screw | |

1. Install the hood using the installation scheme.
2. Check the minimum and maximum distance according to workbench and drill points A, B.(Fig. 12)
3. Place Ø10mm pins in drilled A, B points and screw the screws to A+B points leaving 5 mm gap between screw head and the wall.(Fig. 12)
4. Hang the hood on the wall using A, B points.

ASSEMBLY OF SHEET METAL FLUES

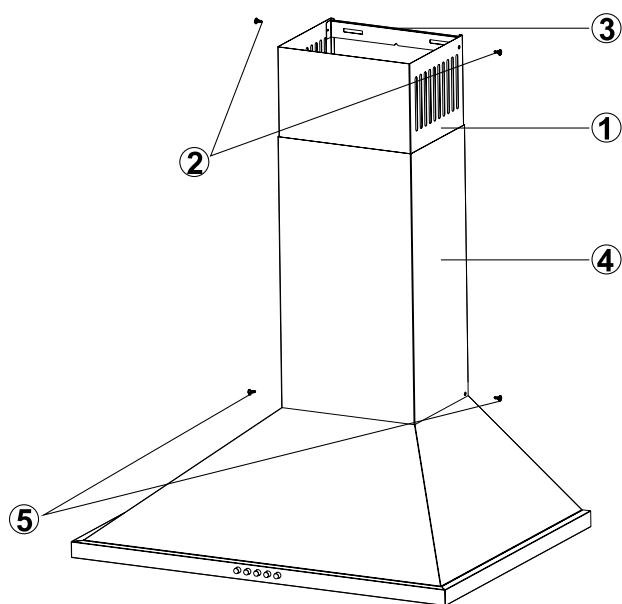


Fig. 13

1. Internal Flue
2. Internal Flue Connection Sheet Fixing Screws
3. Flue Connection Metallic Sheet
4. External Flue
5. External flue fixing screws

Install air exhaust connection of the appliance.

Internal and external sheet flues are inserted to each other. ()

- Center flue connection sheet (3) on the hood, hold it under the cover or measure and mark C, D points (Fig. 13).
- Drill C, D points with Ø6mm drill and place Ø6mm plastic pins. Place flue connection sheet on the surface where 3.9x22 screws will be installed.(Fig. 13)
- Pull out the internal flue (1) using screws (2) and screw it on flue connection sheet on the right and left (3).(Fig. 13)
- Mount the external flue (4) on hood body using 2 screws (5). (Fig. 13)

USE OF PRODUCT

Using Push Button Product

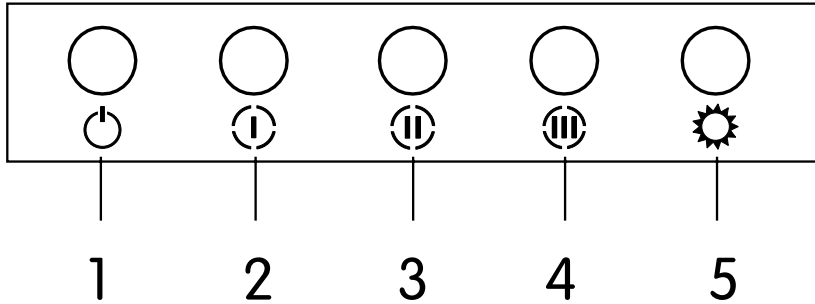



Fig. 14: push button

1. Press this button to reset your product.
2. Product will run on 1st speed level when this button is pressed.
3. Product will run on 2nd speed level when this button is pressed.
4. Product will run on 3rd speed level when this button is pressed.
5. Press this button to turn on and off the lamp.

REPLACING THE LAMPS

LED Lamp Replacement

3 W LED LAMP

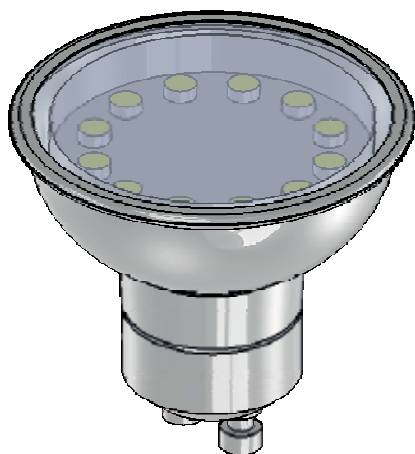

BULB POWER (W)	3
Lampholder / Socket	GU10
Bulb Voltage (V)	220 - 240
Size (mm)	53x50mm
ILCOS Code	DR/F3-220-240- GZ10-50-53
Energy Class	F



WARNING!

During the replacement of the lamps, lampholder contacts are under the current. Before the replacement, turn off the appliance, unplug it or switch off the circuit breaker.



DANGER!

LED lights are very bright and may damage the eyes (risk group 1). You should not look directly at running LED lights for longer than 100 seconds.




CAUTION!

Use only the lamps that have the same power and type.



Contact the dealer or customer service when any lamp of the appliance fails.



max 3 W

It indicates the maximum power consumption of the lamp. A lamp with same power rating should be used when replacing the lamp.



To find out the power rating used in the product, see the declaration label in the product.



Fig. 15: LED lamp symbol

Only self-protection tungsten LED lamp, LED or self-protection metal halide lamp must be used.

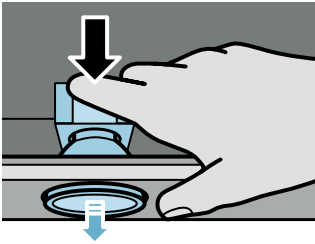


Fig. 16

Ensure that the lamp is popping out by pressing the lamp from behind. Remove the lamp by turning a quarter of a round in counterclockwise (Fig. 16).

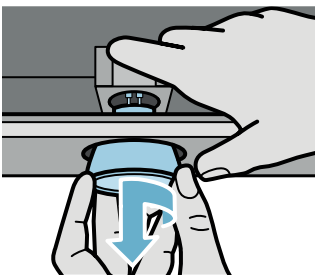


Fig. 17

Replace the lamp by installing a new lamp with the same specifications (Fig. 17).

AUTHORIZED SERVICE

If Lighting is Not Functioning:

- Make sure that the plug is plugged in, and that the fuses are intact.
- Check the bulbs. Make sure you unplugged the device before performing this check. Tighten the bulbs if they are loose; you can replace the bulbs if they still don't work.

Possible Faults and Things that You can do Before Calling Technical Service:

A) If the device does not run in any way:

- Check to see if the hood is plugged in or if the plug fits properly into the socket.
- Check the fuse, to which the appliance is connected, as well as the main fuse of your house.

If the device performance is not enough and it creates high noise while running:

- Is the outlet diameter of the appliance's flue adequate? (min. 120 mm).
- Are the metal filters clean? Please check.
- If you use the hood without flue, make sure that the carbon filters are not older than 6 months.
- Be attentive to ventilate your kitchen adequately, in order to provide an airflow. If you are still not satisfied with the performance of the appliance, consult the authorized technical service.


TROUBLESHOOTING

FAULT DESCRIPTION	CAUSE	REMEDY
Product Does Not Work	Check the power connection.	Mains voltage must be 220-240 V, and product must be plugged into a grounded socket.
Illumination lamp does not operate	Check the power connection.	Mains voltage must be 220-240 V, and product must be plugged into a grounded socket.
Illumination lamp does not operate	Check the lamp switch.	Lamp switch must be at "on" position.
Illumination lamp does not operate	Check the bulbs.	Bulbs must be operative.

FAULT DESCRIPTION	CAUSE	REMEDY
Product's Air Intake is Weak	Check The Aluminium Filter.	The aluminium cartridge filter should be washed once a month under normal conditions.
Product's Air Intake is Weak	Check The Air Outlet Flue.	Air Outlet Flue Must Be Open.
Product's Air Intake is Weak	Check The Carbon Filter.	In products that work with carbon filters, carbon filter must be replaced once in every 3 months under normal conditions.
It Does Not Discharge Air (in flueless use)	Check The Aluminium Filter..	The aluminium cartridge filter should be washed once a month under normal conditions.
It Does Not Discharge Air (in flueless use)	Check The Carbon Filter..	In products that work with carbon filters, carbon filter must be replaced once in every 3 months under normal conditions.

TECHNICAL TABLE

Supply Voltage	220 - 240 V 50HZ
Insulation Class of Motor	F
Insulation Class	CLASS I

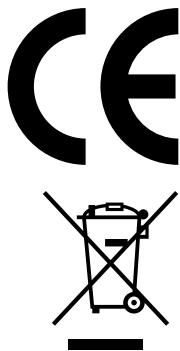

This product complies with the 2014/30/EC (Regulation on Electromagnetic Compliance) and 2014/35/EC (Regulation on Low Voltage Devices (LVD)) Directives.

This device complies with the Directive on the Control of Waste Electrical and Electronic Equipment.

Specifications of the device and this manual may be modified without prior notification.

Innehåll

INFORMATION	30
TEKNISK RITNING	31
VARNINGAR OCH SÄKERHETSFÖRESKRIFTER	32
LIVSFARA OCH RISK FÖR FÖRGIFTNING	34
UTSUG TILL DET FRIA ELLER KOLFILTER	39
MONTERING AV KOLFILTER	40
RENGÖRING OCH UNDERHÅLL	41
MONTERING/INSTALLATION AV PRODUKTEN	42
PAKETETS INNEHÅLL	44
ÖVERSIKT ÖVER FLÄKTEN	44
MONTERING AV FLÄKTEN	45
HUR MAN ANVÄNDER PRODUKTEN	48
BYTE AV GU10-LAMPA	49
AUKTORISERAD SERVICE	50
FELSÖKNING	51
TEKNISK TABELL	52

INFORMATION

Denna riktlinje och säkerhetsdata innehåller all nödvändig information för en säker montering samt en säker användning utan defekter.

- Läs alla dessa riktlinjer och säkerhetsdata innan du använder enheten.
- Förvara riktlinjen på lämplig plats.
- Om du lämnar enheten till andra, se till att du också tillhandahåller denna riktlinje och säkerhetsdata.
- Om du ignorerar denna riktlinje kan det resultera i allvarliga skador och defekter i enheten.
- Tänk på att vi inte kommer att ansvara för de defekter som uppstår till följd av att vi inte tar hänsyn till denna riktlinje.

Figurerna i denna riktlinje syftar till att visuellt beskriva åtgärderna. I dessa figurer visas endast en modell av enheten. I alla fall, alla instruktioner eller figurer representerar även andra modeller.

TEKNISK RITNING

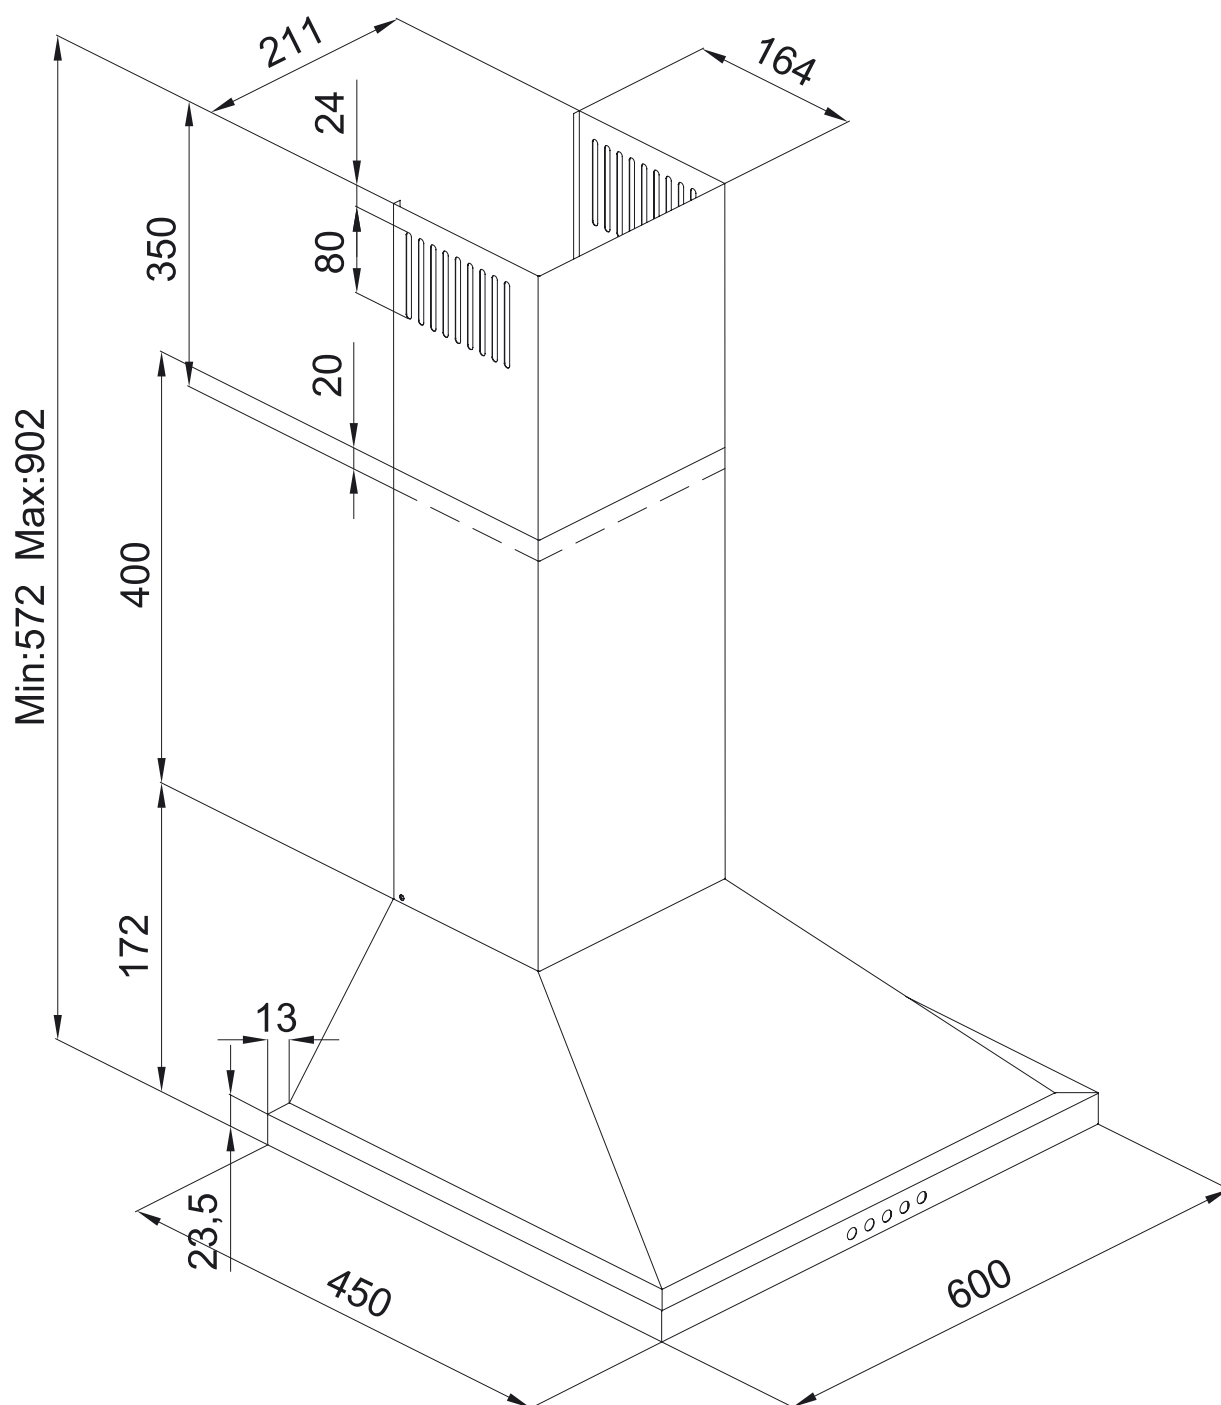


Fig. 1:

VARNINGAR OCH SÄKERHETSFÖRESKRIFTER

- Denna produkt får enbart användas av barn över 8 år och personer utan fysiska, sensoriska eller mentala hinder eller avsaknad av erfarenhet och vetskap, när de är under uppsyn eller att de är instruerade om säker användning.
- Produkten är avsedd för hemmabruk.
- Spänningen på produkten är 220-240 Volt~50 Hz.
- Fläkten är monterad med en kabel med jordledning. Denna kabel ska anslutas till vägguttag med jordförbindelse.
- Alla elektriska anslutningar ska utföras av en elektriker.
- Obehörig installation kan medföra sämre prestanda, skador på produkten eller olyckor.
- Produktens kabel får inte klämmas eller knäckas under installationen. Strömledningen får inte ledas i närheten av spisar. Detta kan leda till smältning och brand.
- Anslut inte produkten innan monteringen är färdig.
- Se till att vägguttaget är lättillgängligt för att kunna stänga av produkten i tillfälle av en nödsituation.
- Rör inte vid produktens glödlampor om de har varit tända en längre tid. Glödlamporna blir mycket varma och kan orsaka brännskador på dina händer.
- Produkten är designad för användning i hemmet till konventionell matlagning. Om produkten används för ej avsedda syften kan reklamationsrätten bortfalla.
- Följ myndigheters regler och lagar gällande utsläpp av frånluft. (Detta gäller inte för användning utan ventilation (recirkulation)).
- Matvaror som kan antändas under matlagning får inte tillagas under denna produkt. Starta produkten efter att ha placerat pannor, grytor osv på spisen. Annars kan hög värme förorsaka deformation av vissa delar av produkten.
- Stäng av kokplattorna innan du tar bort kastrullen eller pannan därifrån.
- Lämna inte varm olja på spisen. Pannor med varm olja kan självantända och börja brinna. Olja kan antändas under stekning osv. Var försiktig med gardiner och filtar.
- Se till att rengöra och byta ut filtret i tid. Filter som inte rengörs eller byts ut i tid utgör brandfara på grund av ackumulerat fett i dem.
- Använd enbart original-aluminiumfettfilter till fläkten.
- Använd inte produkten utan ett fettfilter. Undvik att avlägsna filtret då produkten är i påslagen.
- Vid eventuell brand, koppla ifrån fläkten och spisen. (Koppla ifrån produkten eller stäng av huvudströmbrytaren).
- Produkten kan utgöra brandfara om den inte rengörs regelbundet.

- Stäng av enheten före underhåll. (Koppla ifrån produkten eller stäng av huvudströmbrytaren). Undertryck i rummet, medan fläktar och utrustning som är igång på andra källor än elektricitet och som används samtidigt, får inte överstiga 4Pa (4 x 10 bar).
- Om det är enheter som används med bränsle eller gas i närheten av där produkten används, som t ex värmeprodukter, ska kanalen från dessa enheter vara helt isolerade, alternativt ska enheten vara lufttät.
- Barn får inte leka med produkten.
- Använd "MAX 10A" säkring till produkten för din säkerhet.
- Håll förpackningsmaterialet borta från barn, då det kan vara farligt för dem.
- Alla material som är använda till förpackning av produkten är anpassade för återanvändning.
- Följ anvisningarna på produktens kartong under transport.
- Håll fast i greppen på sidan av låda för att bära produkten. Om du behöver transportera produkten igen:
- Behåll originalkartongen. Bär och frakta produkten i denna.
- Om strömkabeln är skadad ska den utbytas av tillverkaren eller dennes serviceavdelning eller annan personal med motsvarande behörighet för att undvika farliga situationer.
- Vid brand, koppla ifrån fläkten och spisen och täck över flammorna. Använd aldrig vatten vid släckning.
- Åtkomliga delar kan vara varma när spisen är på.
- Se till att fläkten har korrekt höjd över kokplattan. Läs rekommenderad höjd i manualen. Kontakta ev brandmyndigheten i din kommun angående vilka lokala lagar och regler som gäller.
- Fläktens utsug får inte anslutas till rökkanaler som omfattar andra rökprodukter.
- Det ska iaktas försiktighet då fläkten används samtidigt som andra enheter som använder luft och bränsle (t ex värmeprodukter, vattenvärmare och liknande som drivs med gas, dieselolja, kol eller trä). (Detta gäller inte användning av fläktar med kolfilter (re-cirkulation)).
- Rummet ska ha tillräcklig ventilation när spis, fläktar och enheter som drivs med gas och liknande bränslen används samtidigt (Kan inte användas på enheter som cirkulerar luft i rummet).
- Olika material kräver olika pluggar och skruvar. Använd pluggar och skruvar som passar till de material fläkten ska monteras i.

LIVSFARA OCH RISK FÖR FÖRGIFTNING



FARA! **Varning - Kvävningsrisk!**

Förpackningsmaterialet är farligt för barn. Låt aldrig barn leka med förpackningsmaterial.



FARA! **Varning - Dödsrisk**

Det finns livsfara och förgiftningsrisk på grund av återupptagna förbränningsgaser. Använd inte apparaten under användning av luftutloppet, om inte tillräcklig lufttillförsel tillhandahålls samtidigt med enheter som laddar ur giftiga gaser genom rökkanaler såsom ventilerade, gas-, olje-, ved- eller koleldade värmare, duschvärmare, varmvattenberedare, etc. Fig. 2

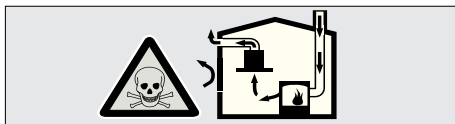


Fig. 2: Poisoning Danger

Luftcirkulationsapparater (t ex ugnar, brännare, vattenvärmare, som drivs med gas, olja, trä eller kol) tar förbränningsluften och för ut gaserna genom en skorsten eller liknande. En fläkt med hög effekt riskerar att vända denna luftström och därmed dra gaserna genom bostaden och ut genom fläktens kanal. Detta innebär risk för förgiftning för personer som vistas i närheten av denna luftström (Fig. 2)

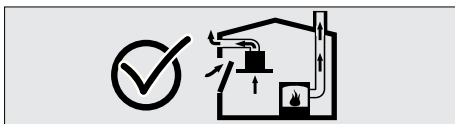


Fig. 3

- Ett tillräckligt intag av frisk luft bör därför alltid säkerställas (Fig. 3).

**VARNING!
Brandfara!**

- Oljerester i fettfiltret kan fatta eld. Rengör fettfiltret minst en gång var tredje månad. Använd aldrig enheten utan fettfiltret.
- Oljerester i fettfiltret kan fatta eld. Arbeta aldrig med öppen låga (ex. flambe) nära enheten. Apparaten får endast installeras nära en värmare för fast bränsle (t.ex. ved eller kol) om den har ett icke-borttagbart lock. Inga gnistor får spridas.
- Heta oljor och fetter tar lätt eld. Heta oljor och fetter bör aldrig lämnas utan uppsikt. Försök aldrig släcka eld med vatten. Stäng av spisen. Döda lågorna försiktigt med ett överdrag, brandfilt eller liknande material.
- Gasspisar som inte har en kokkärn på skapar hög värme under drift. En ventilationsanordning placerad över spisarna kan skadas eller brännas av denna anledning. Använd gasspisar endast där är en kokkärn på dem.
- Att använda flera gasspisar samtidigt skapar hög värme. En ventilationsanordning placerad över spisarna kan skadas eller brännas av denna anledning. Använd aldrig två gasspisar längre än 15 minuter på hög låga. En stor brännare över 5kW (Wok) har effekten av två gasbrännare.

**VARNING!
Risk för elstöt!!**

- En felaktig anordning kan orsaka elektriska stötar. Slå aldrig på en felaktig enhet. Dra ut stickkontakten och stäng av strömbrytaren. Ring kundtjänst.
- Olämpliga reparationer utgör risker. Reparationer och byte av skadade nätsladdar får endast utföras av en kundtjänsttekniker som utbildats av oss. Om enheten inte fungerar, dra i stickkontakten och stäng av strömbrytaren. Ring kundtjänst.
- Vatten som läcker in i enheten kan orsaka elektriska stötar. Högtrycksvätt eller ångtvätt får inte användas.

**FARA!**
Risk för fysisk skada!

- Under installationen finns det risk för fysisk skada på grund av de vassa kanterna. Använd skyddshandskar under hela installationsprocessen av apparaten.
- På grund av risken att tappa apparaten måste monteringen av alla säkerhetsbultar och kåpor utföras enligt anvisningarna i bruksanvisningen.
- Föremål som placeras på apparaten kan välta. Placera inga föremål på enheten.
- LED-lampor är mycket starka och kan skada ögonen (riskgrupp 1). Du får inte titta direkt på lysande LED-ljus längre än 100 sekunder.

**VARNING!**
Risk för brännskador, risk för elektriska stötar!

- Låt apparaten svalna innan rengöring eller underhåll. Slå av säkringen eller dra ut stickkontakten ur uttaget.
- Det finns risk för skador på grund av att fukt tränger in i elektroniken. Rengör inte kontrollkomponenterna med en våt trasa.
- Ytan kan skadas på grund av en felaktig rengöringsprocess. Rengör ytor av rostfritt stål endast i deras borstriktningsriktning. Använd inte ett rengöringsmedel för rostfritt stål för kontrollelementen.
- Ytan kan skadas på grund av aggressivitet och slipande rengöringsmedel. Använd aldrig aggressiva och slipande rengöringsmedel.

**VARNING!**
Risk för brand och fysiska skador!

Vid reparation som inte utförs enligt reglerna eller som krävs, stäng av säkringen eller koppla ur matarkabeln till din apparat. Reparation får endast utföras av auktoriserad teknisk service eller auktoriserade experter.

**OBSERVERA!**

Om apparaten är defekt eller skadad, stäng av säkringen eller koppla ur matarkabeln till din apparat och ring auktoriserad service.

**OBSERVERA!**

Om matarkabeln är skadad måste den bytas ut av dess tillverkare eller dess auktoriserade tekniska service eller annan personal som är kvalificerad på samma nivå för att undvika farliga situationer.

**OBSERVERA!**

Om enhetens glödlampor inte fungerar, stäng av strömbrytaren och dra ur enhetens strömkontakt från uttaget. Byt ut de defekta glödlamporna omedelbart (låt glödlamporna svalna först), för att skydda de återstående glödlamporna mot överbelastning.

**VARNING!**

Tillgängliga komponenter kan värmas upp när de används med matlagings utrustning.

**FARA!**

Luftutloppsröret från denna apparat får inte anslutas till rökkanalen som används för att släppa ut röken som genereras av enheter som använder gas eller andra bränslen.

ORSAK TILL SKADOR



VARNING!

Risk för skador på grund av korrosion. Kör alltid apparaten för att förhindra kondensbildning under matlagning. Kondensat kan orsaka korrosionsskador. Byt ut den felaktiga lampan omedelbart för att förhindra överbelastning av andra lampor. Fuktinträngning i elektroniska delar medför risk för skador. Rengör aldrig kontrollelementen med en blöt trasa. Ytan kan skadas på grund av en fel rengöringsprocess. Rengör ytor av rostfritt stål endast i deras borstningsriktning. Använd inte ett rengöringsmedel för rostfritt stål för kontrollelementen. Ytan kan skadas på grund av aggressiva och nötande rengöringsmedel. Använd aldrig aggressiva och slipande rengöringsmedel. Det finns risk för skador på grund av återflöde av kondensatvätska. Installera luftutloppskanalen med en liten lutning nedåt (1° lutning) från apparaten.

UTSUG TILL DET FRIA ELLER KOLFILTER



Du kan använda denna apparat i frånluftsläge och ventilerad luftläge.

Frånluftsläge

Den absorberade luften renas av fettfiltren och släpps ut genom ett rörsystem. Fig. 4

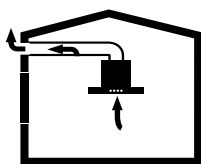


Fig. 4: Luftuttag utan kolfilter



OBSERVERA!

Frånluft får inte överföras till en aktiv rök- eller rökgaskanal; eller en rökkanal som används för ventilation av de platser där värmekällor är installerade.

- Om du vill överföra frånluft till en inaktiv rök- eller rökgaskanal behöver du inhämta tillstånd från en auktoriserad sotare.
- Om frånluft släpps ut genom ytterväggen måste ett teleskopiskt väggskåp användas.

Ventilerat luftläge



Absorberad luft renas av fettfiltren och ett aktivt kolfilter och förs sedan tillbaka till köket. Fig. 5

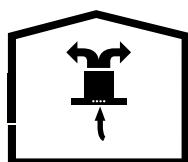


Fig. 5: Luftcirkulation med kol Filtrera



Du måste installera ett aktivt kolfilter för att fånga upp de ämnen som orsakar illamående i den cirkulerande luften. Rådfråga din auktoriserade återförsäljare för att veta vilka olika möjligheter som finns för att låta apparaten fungera i cirkulerande luftläge. Du kan köpa de tillbehör som krävs för denna process från relevanta butiker, auktoriserad teknisk service eller onlineförsäljning.

MONTERING AV KOLFILTER

KOL FILTER

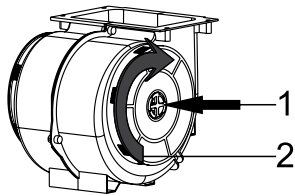


Fig. 6: KOL FILTER

Under förhållanden utan rökanal, bör ett aktivt kolfilter användas för att återsända inneluften genom omfiltrering. Ett aktivt kolfilter bör erhållas från servicen eller din återförsäljare. Koppla ifrån enheten innan du byter ut kolfiltret. Eftersom kolfiltret används i kök utan rökgasuttag, bör det bytas ut mot ett nytt var 3:e till 5:e månad beroende på användning. Kolfiltret ska aldrig tvättas. I vilket fall som helst bör oljefiltren fästas på produkten oavsett om man använder ett kolfilter eller inte. Använd inte produkten utan oljefilter.

1. Montera kolfiltren på motorns sidor (Fig. 6).
2. Skruva fast kolfiltren ordentligt medurs för att låsa dem på plats (Fig. 6).



Om kolfiltret inte passar in helt kan det tappa och skada din produkt.



FARA!

Tvätta aldrig kolfiltren.
Håll kolfilter borta från barn.

RENGÖRING OCH UNDERHÅLL

**VARNING!**

Rengöring och användarunderhåll av apparaten får inte utföras av obehöriga barn.

- Ytan kan skadas på grund av aggressiva och nötande rengöringsmedel. Använd aldrig aggressiva och slipande rengöringsmedel. Skaffa dina rengörings- och skyddsmedel som är lämpliga för din apparat från den auktoriserade tekniska servicen. Ytan på apparaten och styrenheterna är känsliga för repor.
- Rengör ytorna med en mjuk och fuktig trasa, diskmedel eller milt glasrengöringsmedel. Mjuka upp den torra, klibbiga smutsen med en fuktig trasa. Skrapa inte!
- Det är inte lämpligt att använda torra trasor, svampar som kan repa, material som kräver gnidning och andra aggressiva rengöringsmedel som innehåller sand, soda, syra eller klor.
- Rengör ytorna av rostfritt stål endast i deras borstriktningsriktning.
- Använd inte rengöringsmedel av rostfritt stål och våta kläder för kontrollenheter. Rengöring av metallfettfilter Begagnade metallfettfilter håller kvar de feta partiklarna i fukten och ångan som alstras i köket. Rengör metallfettfiltren ungefär var tredje månad, under normala användningsförhållanden (1 till 2 timmar om dagen).
- Använd inte överdrivet effektiva, sura eller alkaliska rengöringsmedel.
- För rengöring av metallfettfiltren, rengör hållarna på metallfettfiltren i apparaten, även med en fuktig trasa.
- Du kan rengöra metallfettfiltren i diskmaskinen eller för hand.
- Applicera inte sprayrengöringstillbehör direkt på produkten.
- Förvara inte brandfarliga och/eller tunga dekorativa föremål på produkten.

Tvätt i diskmaskinen

Vid diskning i diskmaskin kan en liten färgförändring ske. Detta påverkar inte metallfettfiltrets funktion.

- Rengör inte för smutsiga metallfettfilter tillsammans med redskap i diskmaskinen.
- Placera metallfettfiltren löst och fritt i diskmaskinen. Fettfilter av metall ska placeras i diskmaskinen utan att det fastnar.

Tvätta för hand



För envis smuts kan du använda ett speciellt fettlösningsmedel. Du kan köpa en sådan agent från den auktoriserade försäljningscentralen.

- Mjuka upp metallfettfiltren i varmt vatten med diskmedel.
- Använd en borste för rengöring och vänta tills vätskan i metallfettfilter har rinnit av helt.
- Skölj filtren noggrant efter rengöring.

MONTERING/INSTALLATION AV PRODUKTEN

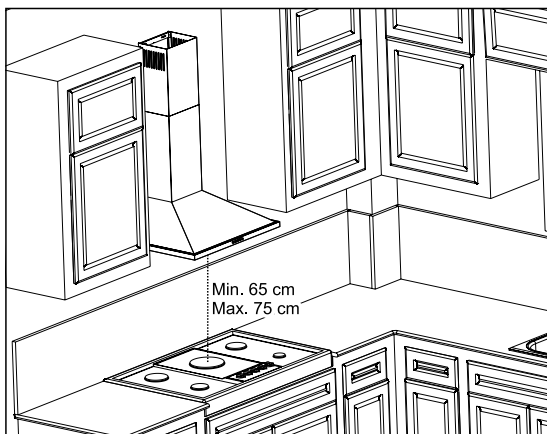


Fig. 7:

Se till att fläkten har korrekt höjd över kokplattan. Vi rekommenderar 500-600 mm över elektrisk spishäll och 700-850 mm över gasspis (Fig. 7).

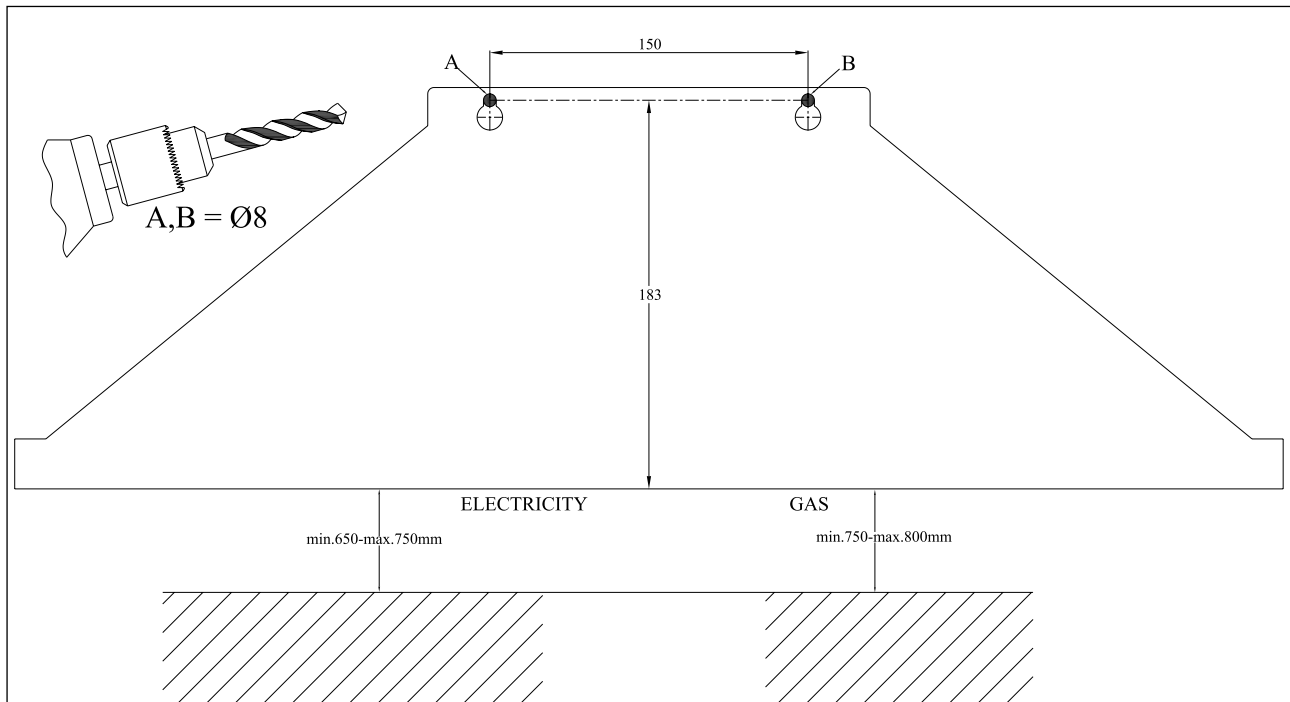


Fig. 8

Installation och uppackning av apparaten

- Kontrollera att din apparat inte är deformerad.
- Rapportera eventuella transportproblem omedelbart till transportören.
- Eventuella fel som uppstår ska också rapporteras till återförsäljaren.
- Låt inte barn leka med förpackningsmaterialet!

Rekommendationer för energibesparing

- Byt ut kolfiltren regelbundet.
- Rengör dina aluminiumfilter regelbundet. Eftersom smutsiga filter skulle blockera luftpassagen kan du behöva använda apparaten vid en högre hastighet.
- Använd din produkt enligt dess normala hastigheter.
- Användning vid högre hastighet skulle orsaka en ökning av energiförbrukningen.

PAKETETS INNEHÅLL


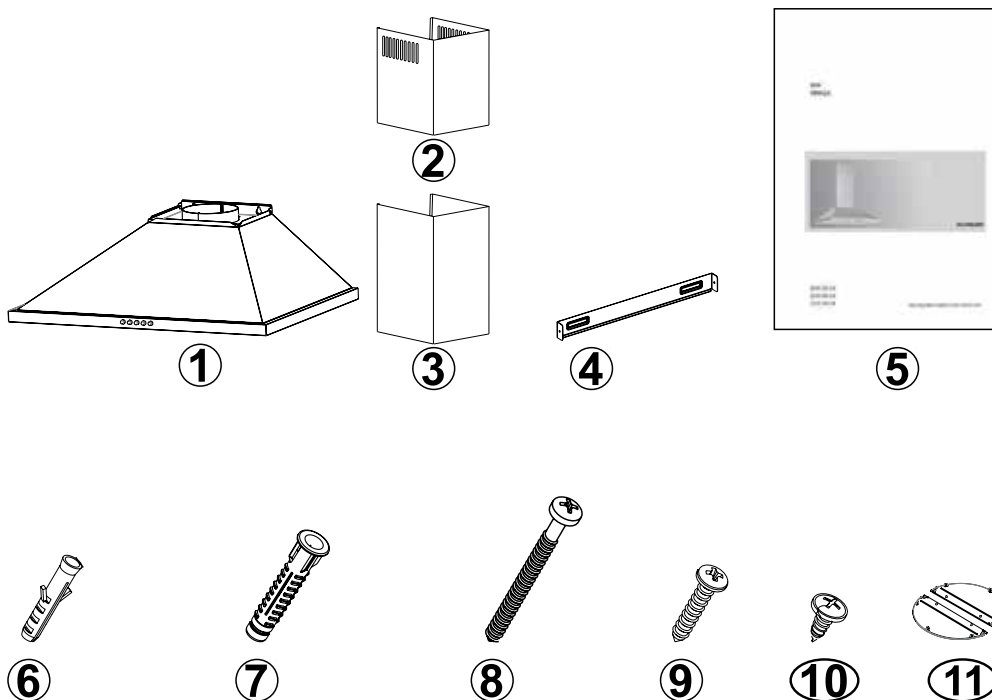


Fig. 9 Paketets innehåll

- | | |
|----------------------------|-------------------------------------|
| 1- Produkt | 8- 5,5x60 väggmonteringsskruv |
| 2- Invändig skorsten | 9- 3,9x22 skorstensskruv |
| 3- Utvändig skorsten | 10- 3,5x9,5 Rökrörsanslutningsskruv |
| 4-Röranslutning metallplåt | 11- Röckanal |
| 5- Bruksanvisning | |
| 6- Ø6mm Plaststift | |
| 7- Ø10mm Plaststift | |

ÖVERSIKT ÖVER FLÄKTEN

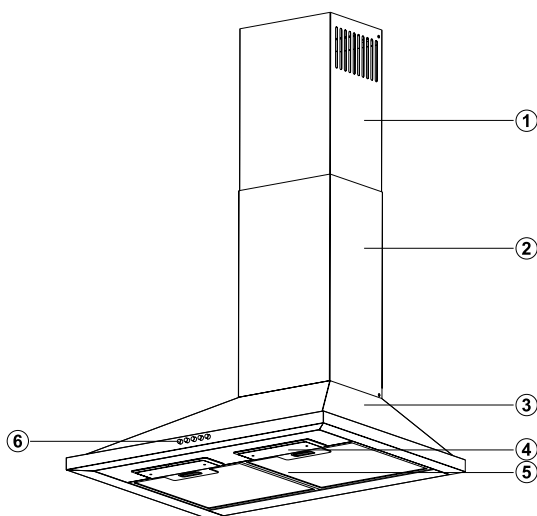


- | |
|---------------------|
| 1- Inre röckanal |
| 2- Yttre röckanal |
| 3- Kabinett |
| 4- Belysning |
| 5- Aluminium filter |
| 6- Kontrol panel |

Fig. 10

MONTERING AV FLÄKTEN

Installationsdiagram och komponenter

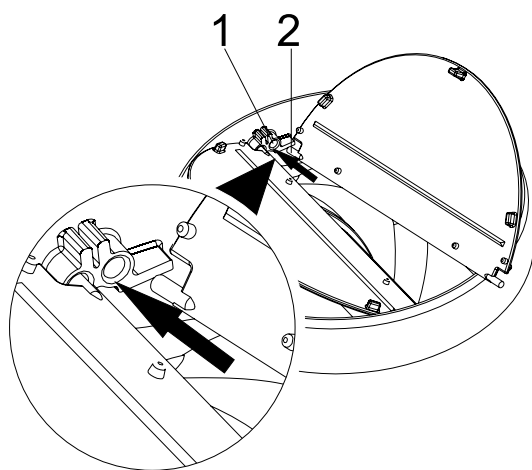

1- Klaffstiftssockel

2- Flikstift

- Tillbehören för montering av enheten inkluderar två huvklaffar. Fäst dessa rökgasspjäll till motoravgaserna enligt nedan
- Sätt i plaststiftet (område nr.2) på stifthylsan på motoravgasröret (område nr.1).Fig. 11(Fig. 11 Böj sedan klaffen lätt för att föra in det andra stiftet på fliken och för in det andra stiftet i dess uttag (Fig. 11).

Fig. 11:

Installationsdiagram och komponenter

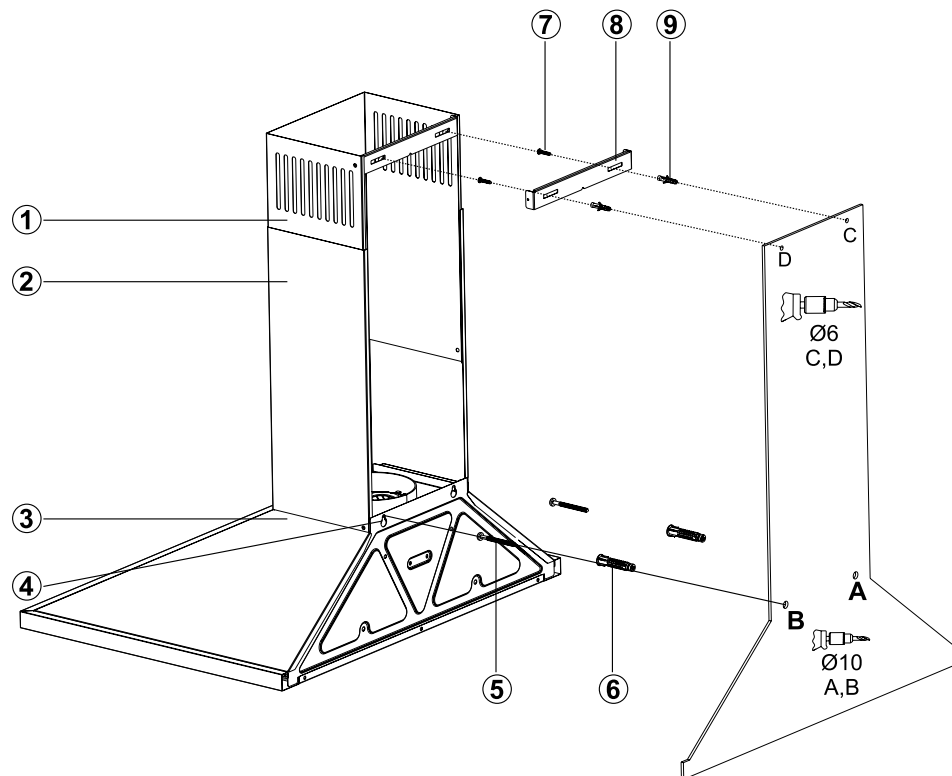


Fig. 12

- 1- Intern röckanal
- 2- Extern röckanal
- 3- Kropp
- 4- Produktstativ
- 5- 2x 5,5x60 väggställsskruv

- 6- 2x Ø10mm Plaststift
- 7- 2x 3,9x22 skruv
- 8- Röranslutning metallplåt
- 9- 2x Ø6mm Plaststift

- Installera huven med hjälp av installationsschemat.
- Kontrollera minsta och maximala avstånd enligt arbetsbänk och borrhåls punkter A, B.(Fig. 12)
- Placera Ø10mm stift i borrhåls A, B spetsar och skruva fast skruvarna till A+B-punkter som lämnar 5 mm mellanrum mellan skruvhuvudet och vägg.(Fig. 12)
- n Häng upp huven på väggen med A, B-punkter.

MONTERING AV RÖKKANAL

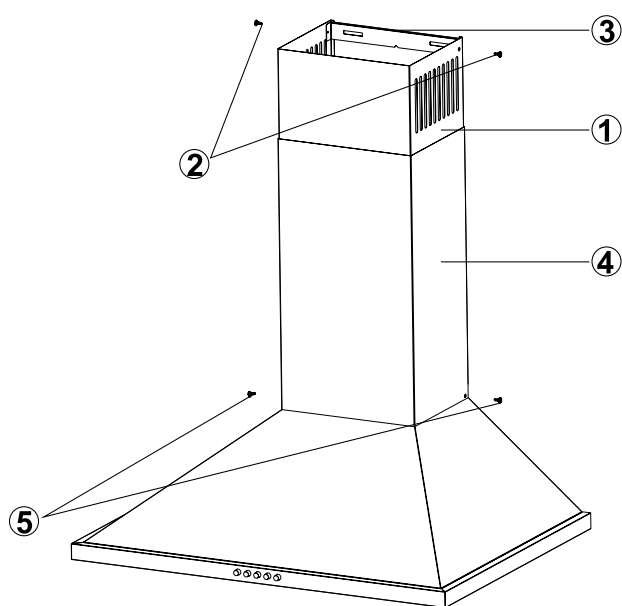


Fig. 13

1. Intern röckanal
2. Fästskruvar för inre anslutningsskivor
3. Röckkanalsanslutning metallplåt
4. Extern röckanal
5. Utvändiga fästskruvar för skorsten

Installera apparatens luftutblåsningsanslutning.

Invändiga och yttre plåtkanaler sätts in i varandra.

- Centra rökgasanslutningsskivan (3) på huven, håll den under locket eller mät och markera C, D-punkterna (Fig. 13).
- Borra C, D-punkter med Ø6mm borr och placera Ø6mm plaststift. Placera anslutningsark för skorsten på ytan där 3,9x22 skruvar ska installeras.(Fig. 13)
- Dra ut den inre röckkanalen (1) med skruvar (2) och skruva fast den på röckkanalens anslutningsplatta till höger och vänster (3). (Fig. 13)
- Montera den yttre röckkanalen (4) på huven med 2 skruvar (5). (Fig. 13)

HUR MAN ANVÄNDER PRODUKTEN

Använda tryckknappfunktion

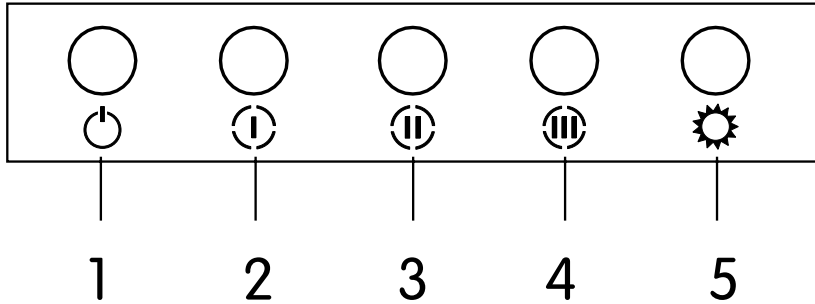



Fig. 14: Tryck knappar

1. Tryck på den här knappen för att återställa din produkt.
2. Produkten körs på 1:a hastighetsnivån när den här knappen trycks in.
3. Produkten körs på 2:a hastighetsnivån när den här knappen trycks in.
4. Produkten körs på 3:e hastighetsnivån när den här knappen trycks in.
5. Tryck på den här knappen för att tända och släcka lampan.

BYTE AV GU10-LAMPA

Byte av LED LAMPA

3 W LED LAMPA

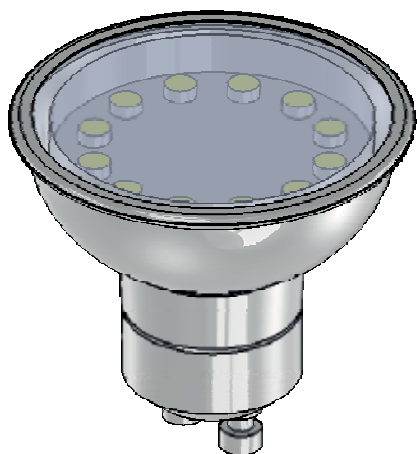

LAMPEFFEKT (W)	3
Lamphållare / Sockel	GU10
Spänning (V)	220 - 240
Storlek (mm)	53x50mm
ILCOS Kod	DR/F3-220-240- GZ10-50-53
Energi klass	F



VARNING!

Vid byte av lampor är lamphållarkontakter under ström. Innan bytet ska du stänga av apparaten, koppla ur den eller stänga av strömbrytaren.



FARA!

LED-lampor är mycket starka och kan skada ögonen (riskgrupp 1). Du bör inte titta direkt på LED-ljus som lyser längre än 100 sekunder.




OBSERVERA!

Använd endast de lampor som har samma effekt och typ.



Kontakta återförsäljaren eller kundtjänst när någon av apparatens lampor går sönder.



max 3 W

Den indikerar lampans maximala strömförbrukning. En lampa med samma effekt ska användas vid byte av lampa.



För att ta reda på vilken effekt som används i produkten, se deklarationsetiketten på produkten.



Fig. 15: LED lampa symbol

Endast självskyddande volfram LED-lampa, LED eller självskyddande metallhalogenlampa får användas.

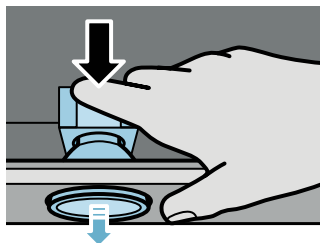


Fig. 16

Se till att lampan hoppar ut genom att trycka på lampan bakifrån. Ta bort lampan genom att vrida ett kvarts varv moturs (fig. 16).



Fig. 17

Byt ut lampan genom att installera en ny lampa med samma specifikationer (Fig. 17).

AUKTORISERAD SERVICE

Om belysningen inte fungerar:

- Se till att kontakten är ansluten och att säkringarna är hela.
- Kontrollera glödlamporna. Se till att du kopplat ur enheten innan du utför denna kontroll. Dra åt glödlamporna om de är lösa; du kan byta ut glödlamporna om de fortfarande inte fungerar.

Möjliga fel och saker som Du kan göra innan du ringer teknisk service:

A) Om enheten inte fungerar på något sätt:

- Kontrollera om huven är ansluten eller om kontakten passar ordentligt i uttaget.
- Kontrollera säkringen som apparaten är ansluten till, samt huvudsäkringen i ditt hus.

B) Om enhetens prestanda inte är det tillräckligt och det skapar högt ljud medan man springer:

- Är utloppsdiаметern på apparatens röckanal tillräcklig? (min. 120 mm)..
- Är metallfiltren rena? Kontrollera
- Om du använder huven utan röckanal, se till att kolfiltren inte är äldre än 6 månader..
- Var uppmärksam på att ventilerat ditt kök tillräckligt för att ge ett luftflöde. Om du fortfarande inte är nöjd med apparatens prestanda, kontakta den auktoriserade tekniska servicen.


FELSÖKNING

FELBESKRIVNING	ORSAK	ÅTGÄRD
Produkten fungerar inte	Kontrollera strömmen förbindelse.	Nätspänningen måste vara 220-240 V, och produkten måste vara ansluten till ett jordat uttag.
Belysningslampan fungerar inte	Kontrollera strömmen förbindelse.	Nätspänningen måste vara 220-240 V, och produkten måste vara ansluten till ett jordat uttag.
Belysningslampan fungerar inte	Kontrollera lampans på/av knapp	Lampknappen måste vara i läge "på".
Belysningslampan fungerar inte	Kontrollera glödlamporna	Glödlamporna måste fungera.

FELBESKRIVNING	ORASK	ÅTGÄRD
Produktens luftintag är svagt	Kontrollera aluminium filtret	Aluminiumpatronfiltret bör tvättas en gång i månaden under normala förhållanden.
Produktens luftintag är svagt	Kontrollera luftuttagets röckanal.	Luftutloppet måste vara öppet
Produktens luftintag är svagt	Kontrollera kol filtret	I produkter som fungerar med kolfilter måste kolfilter bytas ut var tredje månad under normala förhållanden.
Den släpper inte ut luft (i rökfri användning)	Kontrollera aluminium filtret.	Aluminiumpatronfiltret bör tvättas en gång i månaden under normala förhållanden.
Den släpper inte ut luft (i rökfri användning)	Kontrollera kol filtret.	I produkter som fungerar med kolfilter måste kolfilter bytas ut var tredje månad under normala förhållanden.

TEKNISK TABELL

Mätningsspänning	220 - 240 V 50HZ
Motorns isoleringsklass	F
Isoleringsklass	KLASS I

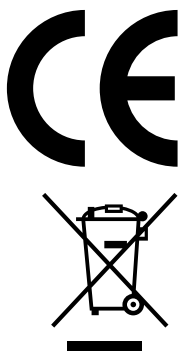

Den här produkten följer direktiven 2014/30/EC (förordning om elektromagnetisk överensstämmelse) och 2014/35/EG (förordning om lågspänningssenheter (LVD)).

Denna enhet överensstämmer med direktivet om kontroll av avfall från elektrisk och elektronisk utrustning.

Specifikationer för enheten och denna handbok kan ändras utan föregående meddelande.

ELVITA

eLON GROUP

Elvita products are distributed and marketed by
Elon Group AB. Elon Group AB Bäcklundavägen 1 |
702 03 Örebro Sweden
ELON GROUP | +46(0)10-220 40 00 | ELONGROUP.SE
Support and service: ELVITA.SE

